


**2002s**  
**—ONLY—**

## Instructions for installation of the BMW 2002 Third High Center Brake Light

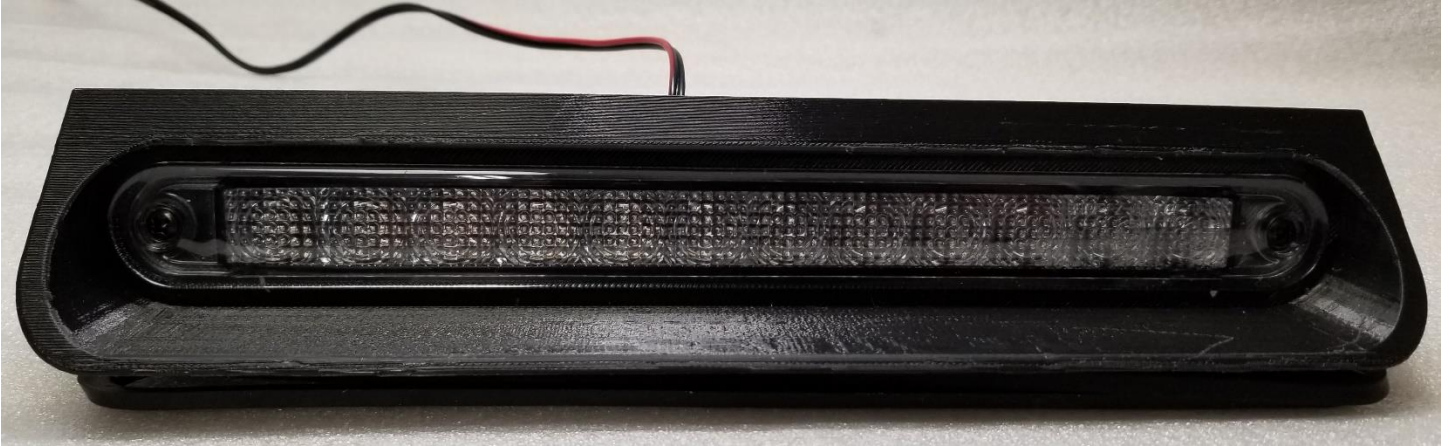

Installation is very straight forward and should take less than an hour. It involves removing the rear bottom seat, crimping the red positive wire to the brown/green brake light wire, grounding the black ground wire to the body at any place convenient, and then pressing the wires from the light into the edge of the rear windshield gasket or up into the headliner and down the C pillar to conceal them. Both electrical connectors are supplied. The light surround is attached to the top or bottom center of the rear windshield with the already applied 3M VHB double sided tape.

**2002<sup>s</sup>**  
**—ONLY—**

## Instructions for installation of the BMW 2002 Third High Center Brake Light

Images for installation

